

Outdoor Banner Frame

Product Parts

- 1 - 2 Stake Bases
- 2 - 2 Top Corner Connectors
- 3 - 2 Bottom Corner Connectors
- 4 - 2 Vertical Bars
- 5 - 2 Horizontal Bars
- 6 - 2 Center Horizontal Connectors
- 7 - 6 Bungee Cords



Display Set-Up (requires 2 or more people)



Step 1

Each piece of the hardware is labeled with numbered and color-coded stickers at each end. Use the stickers to match up connecting pieces. Align the silver snap buttons on the flanged ends with the small holes on the receiver ends. Pressing the snap buttons down, insert the flanged end into the receiver end, adjusting until the buttons snap into place. Repeat until all pieces



Step 2

Hold the first stake base against the ground, aligning it so the wing faces outward from where the frame will stand. Hammer the driving peg until the base's pole receiver is flush with the ground. To avoid damage to the base, make sure the hammer only makes contact with the driving peg and not the pole receiver or wing.

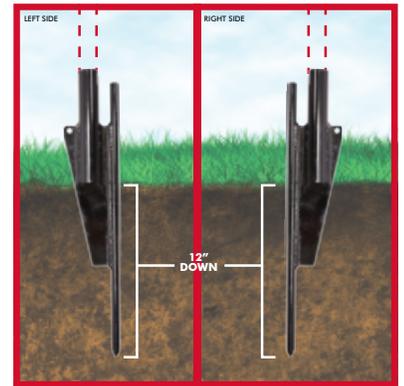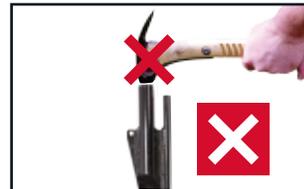

DRIVING PEG — POLE RECEIVER



Step 3

Insert a leg of the assembled stand into the stake base and align the second ground stake with the second leg, aligning the base so the wing faces outward and the driving peg faces inward. Hammer the driving peg of the second base until the pole receiver is flush with the ground, and insert the second leg into the pole receiver of the second stake base.

Outdoor Banner Frame (Cont.)

Step 4

Unroll the banner and thread the loops of the bungee cords through the grommet holes and the eyelets attached to the frame. Pull the loop of each bungee around the plastic ball on the other end to secure the banner to the frame.

